

SUGGESTED TRIMMING PROCEDURE FOR RIMZ 610

The RIMZ 610 was designed to fit the later models of the S & W 610 Revolver manufactured after 1990. If you have received a RIMZ 610 and you discover that the RIMZ 610 does not fit over your indexing star on your revolver, there is a simple way to modify the RIMZ in order to test it in your revolver. **DO NOT TRIM THE RIMZ 610 USING A 10MM STEEL MOONCLIP!**

Figure 1.

To trim the RIMZ 610 you will need a standard **.45 ACP** metal moon clip and an exacto knife. (not shown)

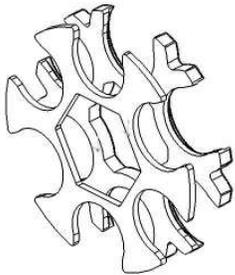
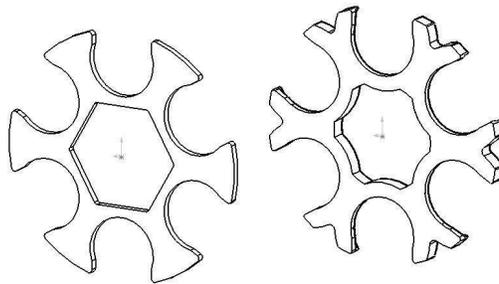


Figure 2.

Align the cartridge pockets of the RIMZ 610 and the metal moon clip. The flat side of the RIMZ 610 must be facing the **.45 ACP** steel moon clip.

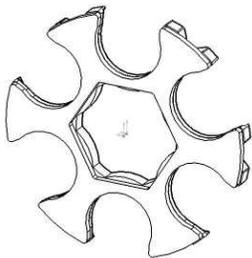


Figure 3.

Place the **.45 ACP** metal moon clip against the flat surface of the RIMZ 610. Keep the cartridge pockets in alignment with your fingers.

Using the **.45 ACP** standard metal moon clip as a guide, carefully cut away just enough of the internal interference to allow the RIMZ 610 to fit your revolver.